

Hopper Assembly

GDF14E


Disassemble

Lift and pull the hopper assembly from the dispenser.



Clean

Daily

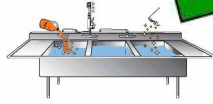

Warning: The drum, hopper and hopper lid are NOT dishwasher safe.

Align hopper indents with support bars. Rotate the drum to align with the drum shaft.



Reassemble

Crumb Tray, Basket Rack


Disassemble

Slide the crumb tray out. Remove the basket rack.



Clean

Daily

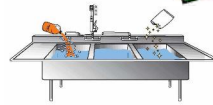

Warning: The crumb tray is NOT dishwasher safe.

Mount the basket rack onto the shoulder bolts. Slide the crumb trap under the basket rack.



Reassemble

Dispenser

Disassemble

Wipe the dispenser with hot sanitizing solution and water.



Clean

Daily



Wipe Down with sanitizing solution.



Do not spray down with water.

Reassemble